


Non-Ricochet Bullet Resistant Deal Tray (Drop In Models)

Mounting Using Clear Silicone Sealant:

- 1) Cut hole in counter using appropriate cutout size from drawing
- 2) Use one strip of $\frac{1}{16}$ " double sided tape (not included) to the top perimeter surface of the deal tray. Make sure the tape follows edge of tray with no overlap. This protects surface from tray and holds in place until silicone dries (do not pull protective strip off tape yet)
- 3) Place tray in hole and seat into the desired position used for final installation
- 4) Apply one strip of Blue masking tape or equivalent, to counter top around the perimeter of tray. Make sure edge of tape meets lip of tray.
- 5) Remove tray from hole. Apply $\frac{1}{4}$ " bead of Translucent Silicone to the underside of tray lip around perimeter of tray, and remove protective strip off the double sided tape
- 6) Replace tray in hole and seat into position. Some silicone may squeeze out onto tape surrounding the lip of the tray. Do not clean or wipe uncured sealant.
- 7) After silicone cures, use a razor blade and cut away around entire perimeter of tray and silicone that may have squeezed out. Peel away tape and cured excess silicone.

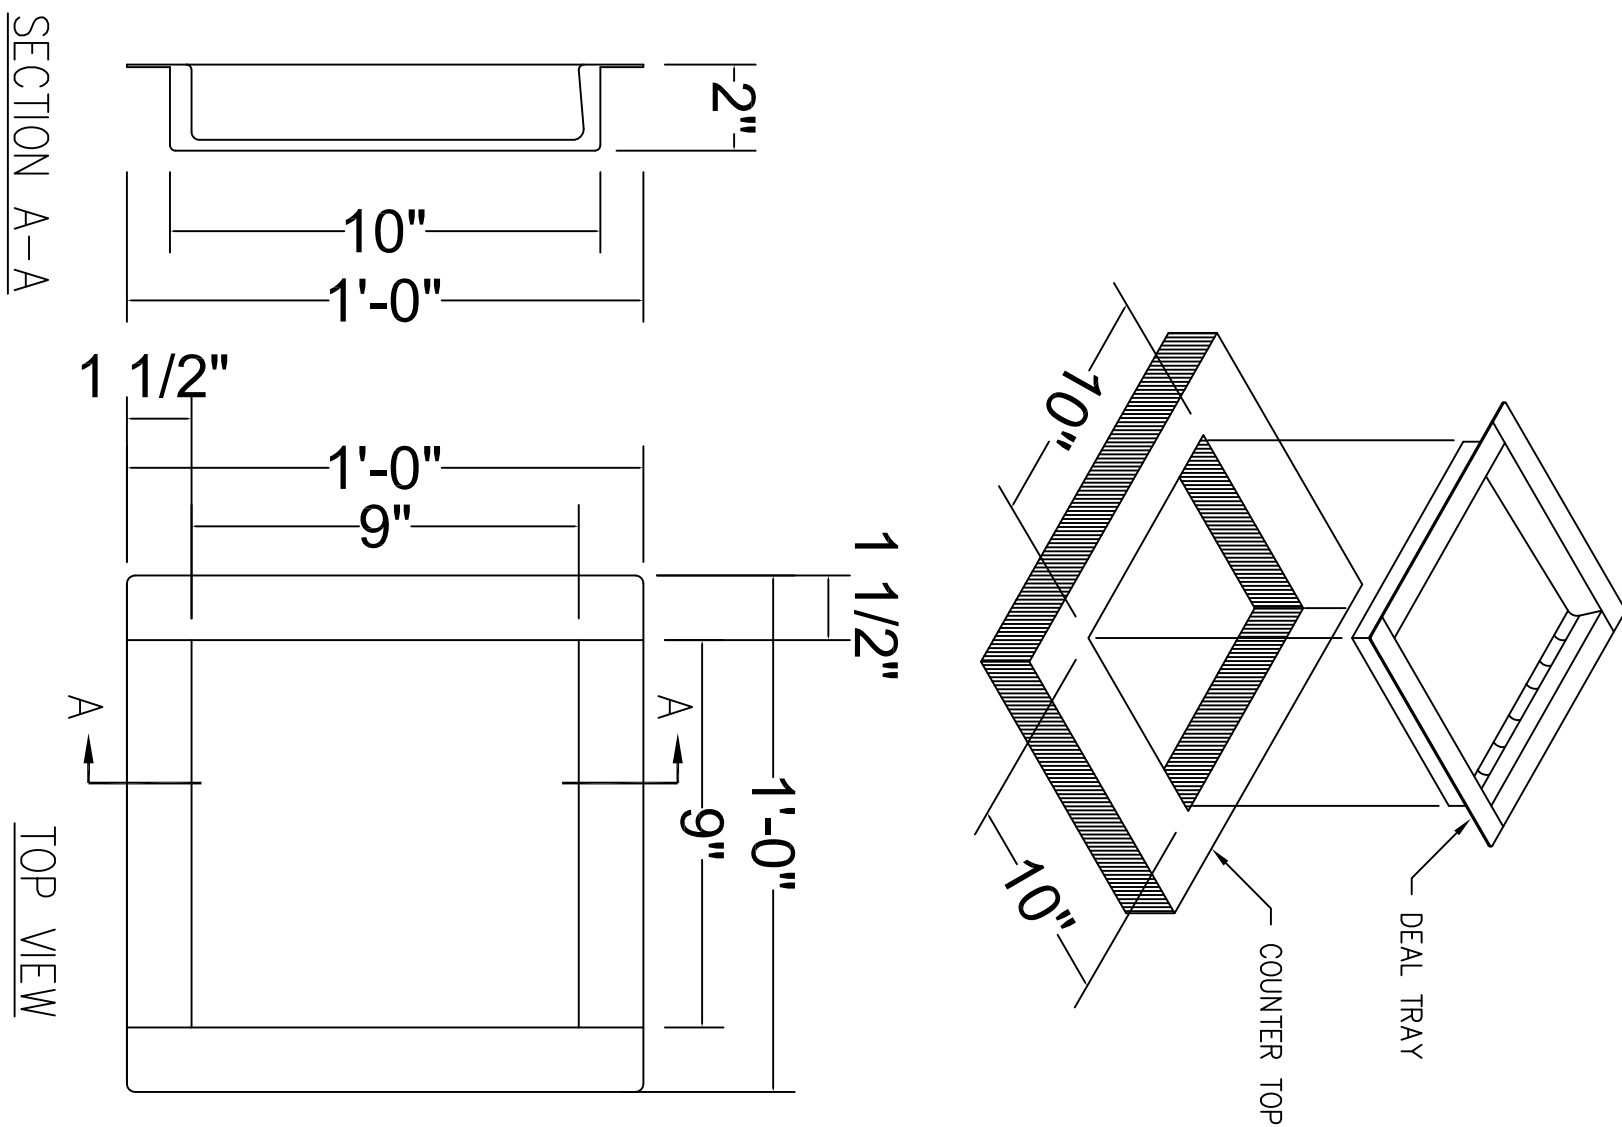

APPROVED	JOB:		ABRBRT312			
	TITLE:		INSTALLATION			
VERIFIED	REVISION # 4	-	FINISH:	xxxxxx	GLASS:	xxxxxx
	REVISION # 3	-	DRAWN BY	SCALE:	DATE:	DWG NO.
	REVISION # 2	-	RF	xxxxxx	xxxxxx	xxxxxx
	REVISION # 1	-	REVISIONS	DATE		

263 UNION BLVD. W. ISLIP, N.Y. 11795
 PH:(631)422-0888 FAX:(631)422-4498
 WWW.ACTIONBULLET.COM

ACTION
BULLET RESISTANT
 SECURITY STOREFRONTS